

SIMPLETaste

Milk Frother



1byone Products Inc.
1230 E Belmont Street, Ontario, CA, USA 91761
Customer Service: +1 909-391-3888
www.1byonebros.com

Made in China

Instruction Manual

IMPORTANT SAFEGUARDS

SAFETY INSTRUCTIONS

Always abide by the following safety rules and instructions when using electrical appliances and read these instructions carefully before using the milk frother.

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plugs, power base, or main unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not remove the lid during operations.
13. Always covered the lid in correct location during operations.
14. This product is only authorized for domestic use and not for commercial or industrial purposes. It is only intended for applications

described in these instructions.

15. This milk frother may be used by children aged 8 years old and over if they are supervised by an adult and have been told how to use the appliance safely and are aware of potential risks.
16. Cleaning and maintenance may not be carried out by children unless they are 8 years old or older and are supervised.
17. Children must not play with the milk frother.
18. This milk frother should only be used by dependents if they are properly supervised and have been made fully aware of the risks of use.

WARNING:

- Do not immerse the frother in water or other liquids when cleaning it.
- If the supplied power cord is damaged, it should be replaced by a qualified technician in order to avoid hazard.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

- a. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b. Longer extension cords are available and may be used if care is exercised in their use.
- c. If an extension cord is used,
 1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 2. The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

Placement

- Always place the milk frother away from the edge of the countertop.
- Make sure the frother is placed on a firm, flat surface.
- Do not use the frother outdoors or near water.

WARNING:

Do not place the frother onto a metal tray or metal surface when in use.

Power Cable

- Do not hang the power cable over the edge of a countertop where a child could reach and pull it.
- Do not place the power cable where people are likely to step on or trip over it.
- Do not run the power cable across a stovetop, near a cooker, or other hot areas which might damage the cable.
- The power cable should reach from the power socket to the frother's power base without straining the connections.

Personal Safety


- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cable, plug and frother in water or any other liquid.
- **WARNING:** Misuse of the frother can cause personal injury.
- Disconnect the frother from power before cleaning and not in use.
- Allow the frother to cool down before putting on or taking off parts and before cleaning.
- Do not move the milk frother while it is switched on.

Other Safety Considerations

- Only use officially-provided attachments and accessories.

- Do not use the frother for any use other than its intended purpose.
- Keep the frother away from heat sources.
- When using the frother, make sure the lid is properly in place and secure before switching it on.
- After use, do not remove the lid until the whisk has stopped rotating completely.
- Never fill your milk frother above the maximum fill line as printed inside the milk frother's jug.
- **CAUTION:** To prevent damage to the frother, do not use alkaline cleaning agents when cleaning. Use a soft cloth and detergent.

Product Description

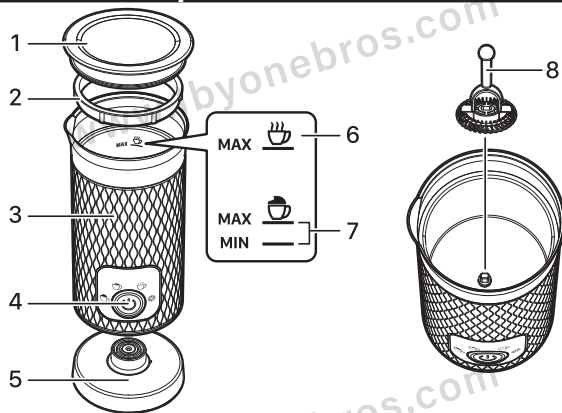

- | | |
|----------------------|---------------------------|
| 1. Lid | 5. Power Base with Cord |
| 2. Silicone Ring | 6. Fill Line for Heating |
| 3. Jug | 7. Fill Line for Frothing |
| 4. Power/Mode Button | 8. Whisk |

Included Items

- 1 x Milk Frother
- 1 x Power Base with Cord
- 1 x Instruction Manual

NOTE:






Before using the milk frother for the first time, check the package contents to ensure all parts are free of visible damage.

Operating Instructions

Before the First Use

Remove the frother from the packaging and wash the inside of the milk frother using warm soapy water and a soft damp cloth. DO NOT use a scouring pad or abrasive agents as this will remove the nonstick coating. DO NOT immerse the frother in water. Rinse and dry thoroughly before use.

1. Place the milk frother on a dry, level surface. Remove the lid from the jug.
2. Install the whisk firmly onto the shaft at the base of the jug.
3. Pour milk into the jug according to the fill line inside the jug. Read the following chart for reference. Do not exceed the fill line. Replace the lid firmly onto the jug.

Whisk	Mode	Icon of Settings	Indicator Light Color	Min. Capacity	Max. Capacity
	Dense Foam Frothing		Red	75ml	130ml
	Airy Foam Frothing		Red	75ml	130ml
	Heating		Red	75ml	300ml
	Cold Milk Frothing		Blue	75ml	130ml

- Press the Power/Mode Button to turn on the frother. The indicator light under the frothing mode logo will illuminate. Successively pressing the Power/Mode Button to select, in order, Dense Foam Frothing, Airy Foam Frothing, Heating and Cold Milk Frothing.
- After selecting your preferred mode, the indicator light blink 3 times, then it stays on, and the milk frother will start operating.
- The milk frother will turn off automatically after finishing frothing/heating.

NOTE:

- Milk heats to approximately 65°C (±3°C). This is the ideal temperature, as it ensures the flavor of the coffee is not impaired.
- For best results, use whole milk. (fat percentage > 3%)
- After each use, wait for 2 minutes to allow the thermostat to cool down.

Pouring the Milk and Froth out of the Jug

- To make the perfect frothy drink, it is recommended to separate the froth from the heated milk when pouring. We recommend using a spoon or spatula to keep the froth in the jug while slowly pouring out the milk. Once all the milk has been poured, remove the froth from the jug and add it to the top of your milk drink.

Cleaning and Maintenance

- It is recommended to clean the frother immediately after each use.
 - Do not remove the connector of whisk when cleaning the milk frother.
 - Do not submerge the frother in water.**
 - The milk frother or any of its accessories are **NOT dishwasher safe.**
- Remove the jug from the power base.
 - Separate the lid and the silicone ring from the jug.
 - Flush and clean the inside of the jug with warm soapy water. Please be careful NOT to dampen the base of the jug.

- Clean the outside of the jug with a soft dampened cloth. NEVER use harsh cleaning agents or abrasive materials.
- Rinse the lid and silicone ring in warm water. Wash them in soapy water if necessary.
- Wash the whisk in warm soapy water and dry thoroughly.
- Reinstall the silicone ring, the lid and the whisk after they dried.

A Guide To Making Coffee

The Milk Frother allows users to create a variety of coffee drinks all from the comfort and convenience of home. The following diagrams are a simple guide to show the proportion of ingredients of different drinks.



Troubleshooting

Issue	Reason	Solution
Indicator light does not work. The milk frother does not work.	Plug is not inserted correctly.	Re-insert the plug.
	The milk frother is not connected to power base correctly.	Remove the jug and replace it on the base correctly.
The jug does not work after operation.	The temperature of jug is too high.	Rinse cold water inside the jug to reduce temperature.
The whisk does not spin.	Jug is not cleaned thoroughly, and the motor is stuck.	Remove the whisk carefully. Clean the jug and whisk again to remove any leftover.
Charring.	Milk either too little or too much.	Ensure that the amount of milk is between min and max mark.
	The milk frother is not cleaned thoroughly before next use.	Always clean the milk frother after each use.

Specifications

Model: 706NA-0003

Rated Voltage: 120V~60Hz

Rated Power: 500W



The appliance's packaging is made from environmentally friendly material and can be disposed of at your local recycling plant.

Customer Service

UNITED STATES	Phone: +1 909-391-3888 (Mon-Fri 9:00am - 5:00pm PST) Email: ushelp@1byonebros.com
CANADA	Email: cahelp@1byonebros.com
UNITED KINGDOM	Email: ukhelp@1byonebros.com
GERMANY/FRANCE ITALY/SPAIN	Email: euhelp@1byonebros.com

BRAND OWNER

1byone Products Inc.

1230 E Belmont Street, Ontario, CA, USA 91761

Customer Service: +1 909-391-3888

www.1byonebros.com