

TIPS FROM IRONING EXPERTS

BEFORE IRONING



WATER DROPS

in this iron show our commitment to high quality.
Iron are 100% quality tested.



USE CLEAN WATER

Using distilled, purified or filtered water is highly recommended and will reduce mineral buildup. Do not use oils, perfumes or scented additives.



SORT YOUR LINEN

Always sort your clothing by fabric type and start by ironing delicate fabrics at low temperatures, saving highest temperatures for last. Consult labels for manufacturers suggestions.

AFTER IRONING




EMPTY YOUR IRON

Empty the water tank after each ironing session to avoid deposit buildup and allow for continued clean steaming.




STORING ON DRY AND ON THE HEEL

Always store your iron on its heel and set it on  position to avoid leaking while off.




MAINTENANCE

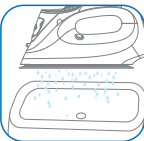




SELF-CLEANING

Use the self-cleaning function every 2 weeks to double the life of your iron and ensure long lasting powerful steam.

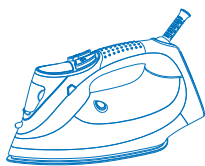Please read carefully the instruction manual before use.



If there is a problem?

Issue	Possible Cause(s)	Solution
Water drips from the holes in the soleplate.	You are using steam while the iron is not hot enough.	Wait until the fabric type on LCD display stops flashing.
	You are using the Steam Burst button too often.	Press the Steam Burst button at 5-second intervals.
	You have stored the iron horizontally, without emptying it and without setting it to the  position.	See the section "Storing the Iron".
Brown streaks come through the holes in the soleplate and stain the linen.	You are using ironing water additives (eg. Scented water, starch).	Never use ironing water additives as these will permanently damage your steam iron.
	You are not using the right type of water.	Perform a self cleaning operation and see the section "What water to use?".
	Your linen has not been rinsed sufficiently or you have ironed a new garment before washing it.	Make sure that your laundry is rinsed sufficiently in order to remove any deposits of soap or chemical products on new clothes.
The soleplate is dirty or brown and can stain the linen.	You are ironing with an inappropriate temperature selection (temperature too high).	Clean the soleplate (see the section "Soleplate Care") and select the appropriate temperature.
	You have ironed over a printed area of a garment.	Never iron printed areas or applications- always iron the reverse side of such a garment.
	The soleplate is dirty.	Check the soleplate before ironing and clean the soleplate (see the section "Soleplate Care").
Steam or water come from the iron as you finish filling the tank.	The Variable Steam Knob is not slid to  the position.	Check that the Variable Steam Knob is slid to the  position.
There is little or no steam.	The water tank is overfilled.	Never exceed the Max level.
	The water tank is empty.	Fill the water tank to the Max level.
The spray does not spray.	The water tank is not filled enough.	Fill the water tank to the Max level.
The iron will stop from time to time.	The movement during ironing is too small that the auto shutoff feature is activated.	Please try to use the iron with larger movement.